


During Paving

Frame to be set to Grade By
Using High Compression (pink)
Brick at Third points.
NO WOOD SHIMS ALLOWED.

After Cure

Debris to be Cleaned out
(to Concrete) Then Completely
Fill void from concrete to strike off
At Frame. With Mixture of 75%
PenngROUT Non-Shrink Cementitious Grout
+ 25% Type F Mortar.

Prior to Paving Adjustment

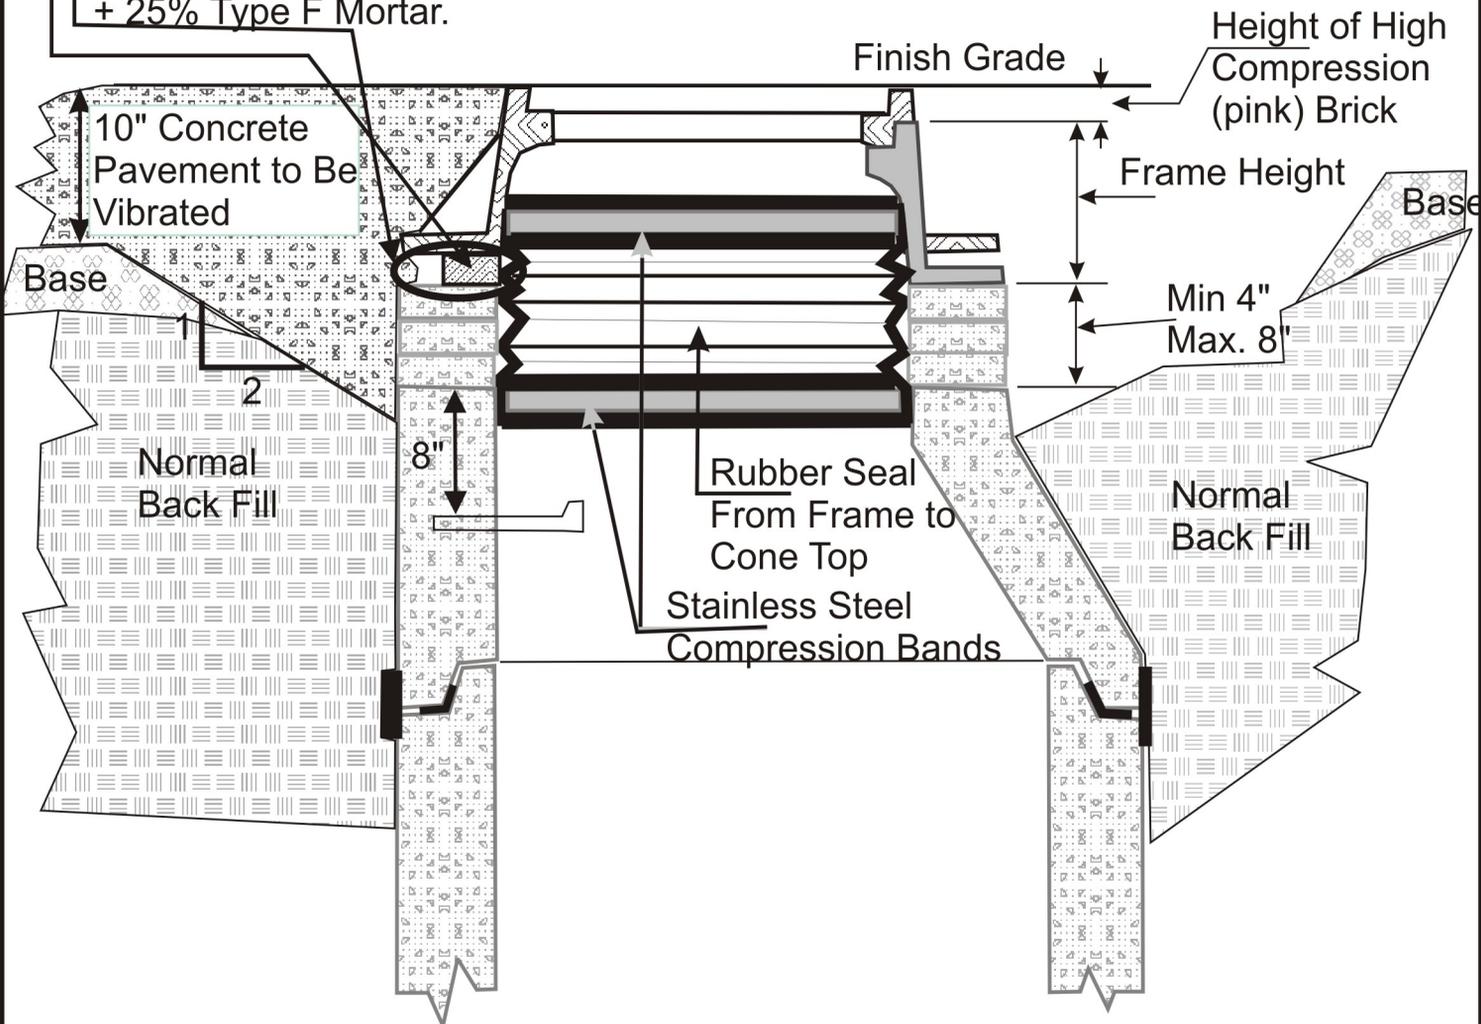

Typical Sanitary Sewer ManHole
Adjustment In Concrete Pavement

Franklin
Engineering Dept.

Not to Scale
1-27-2006

Figure No.30